

1- 3030 sq ft

2- Danielle Seuy

3- fencing or swale around plot to protect the neighbors

4- All excavated material will remain on lot/new dirt also

5- Concrete wash out front corner of plot


6- Porta John on garage side of home staked down 60' from entrance

7- gravel or rock 3" in front of construction entrance

8- Sweep off all mud and dirt or rock

9- Drainage Ditch - place a swale before Ditch so it is protected.

10- property has slight slope to the back. Property used for agriculture use growing Alfalfa = slight slope

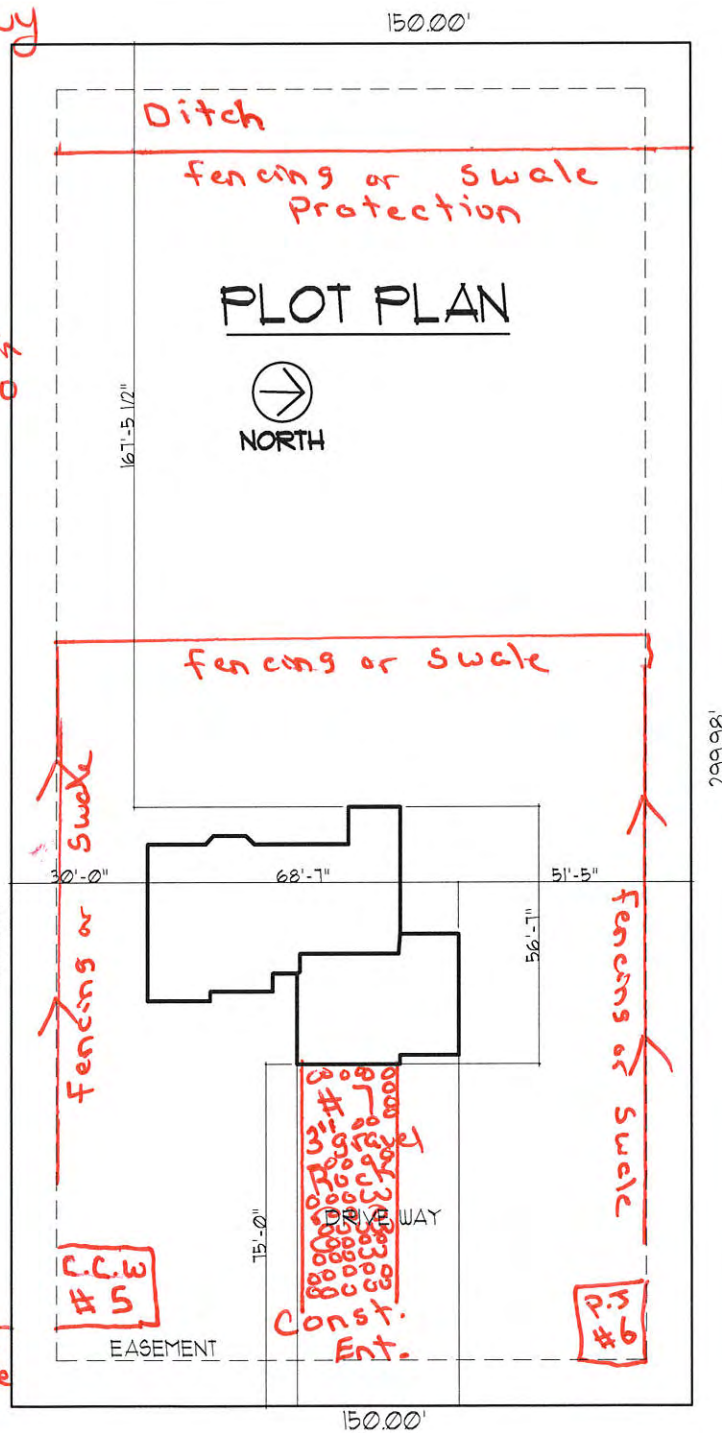

3900 WEST STREET

3900 N. 3900 W.

SCALE 1" = 40'

TYPE B GRADING 2% GRADE 10' AWAY FROM HOUSE