


BASIC SWPPP EXAMPLE STORMWATER POLLUTION PREVENTION PLAN

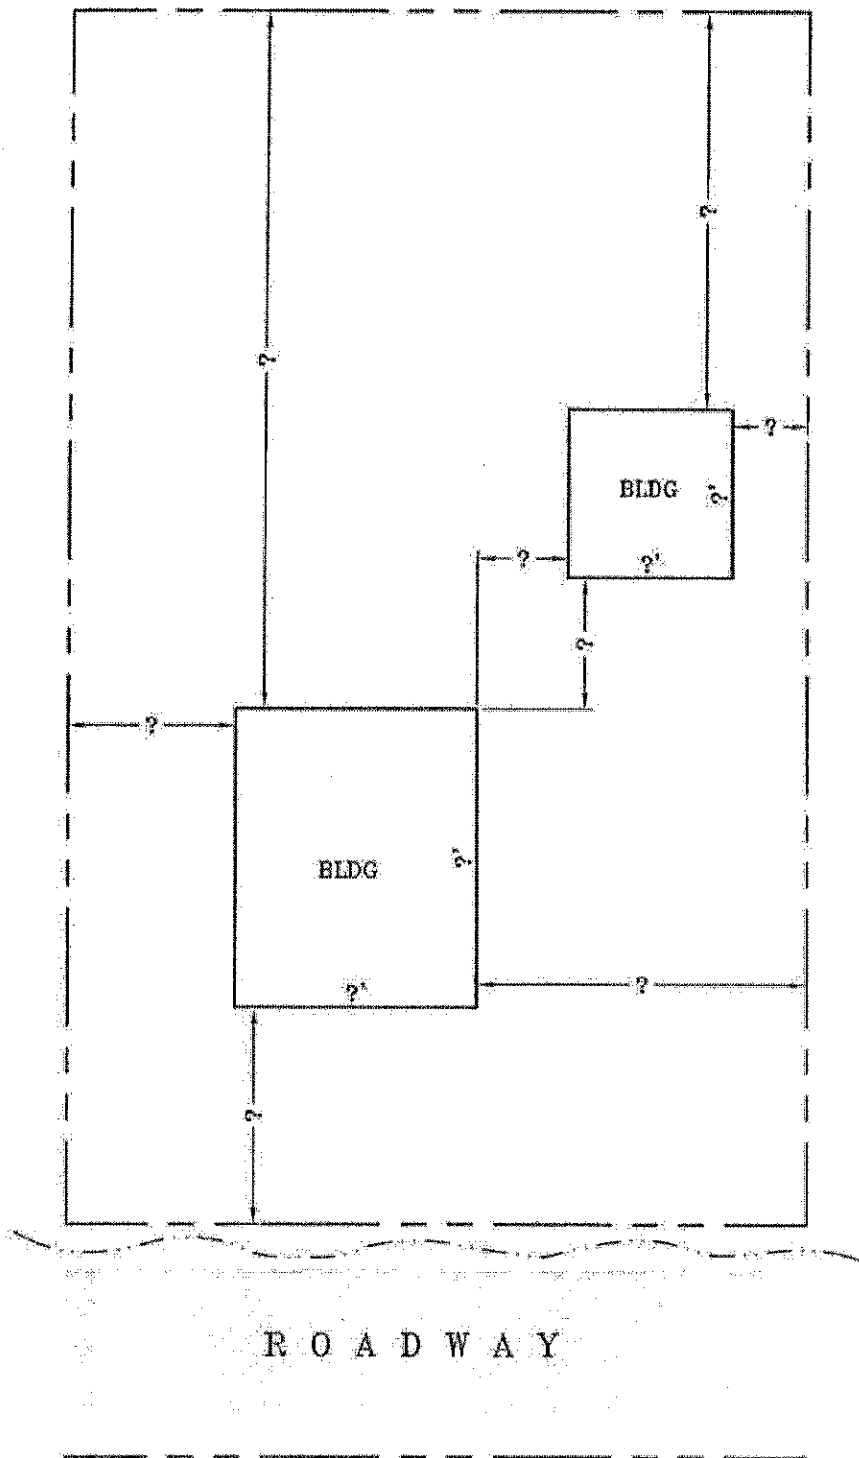

1. HOW MUCH AREA WILL BE DISTURBED?

18,000 square feet

2. WHO WILL BE RESPONSIBLE FOR THE CONDITIONS OF THE SITE DURING CONSTRUCTION?

Brad Kendrick/801.430.6363

3. WHAT WILL BE DONE TO PREVENT THE NEIGHBORS FROM BEING AFFECTED BY THE PROPOSED CONSTRUCTION ACTIVITIES?

NA

4. WHAT WILL BE DONE WITH ALL EXCAVATED MATERIAL TEMPORARILY AND PERMANENTLY?

Hauled out

5. WHERE IS THE CONCRETE WASHOUT & HOW WILL IT BE MAINTAINED?

See site plans (south of main Bldg)

6. WHERE ARE THE PORTA-JOHN'S LOCATED AND HOW ARE THEY INSTALLED?

Access to shop bathrooms

7. HOW WILL THE CONSTRUCTION ENTRANCE BE BUILT AND WHERE WILL IT BE LOCATED?

Wash out track pad, south side

8. WHAT WILL YOU DO WHEN MUD AND/OR DIRT GETS TRACKED ON THE ASPHALT?

Haul it off

9. IS THERE A DRAINAGE DITCH OR SWALE ON OR NEAR YOUR PROPERTY? HOW WILL IT BE PROTECTED?

Canal is above our elevation

10. WHAT CURRENTLY HAPPENS TO THE RAIN/STORM WATER WHEN IT REACHES THIS PROJECT SITE?

Catch basin

11. SHOW ALL EXISTING OCCUPATION ON THE PROPERTY.

Refer to SWPPP plans